EN INSTRUCTIONS FOR USE

DISHWASHER

DVF125XA
DVH1150XA
DVH118GJA

De Dietrich

Dear Customer,

You have just acquired a ***DE DIETRICH*** *dishwasher and we would like to thank you.*

Our research teams have created this new generation of appliances for you. Their quality, design, features and technological advances make them exceptional products, and reveal our unique know-how.

Your new ***DE DIETRICH*** *dishwasher will blend harmoniously into your kitchen and will perfectly combine washing and drying performance and ease of use. We wanted to offer you a product of excellence.*

In the ***DE DIETRICH*** *product range, you will also find a wide choice of hobs, ovens, microwaves, hoods, cookers, fridges, freezers, that you can coordinate with your new* ***DE DIETRICH*** *dishwasher.*

Visit our website ***www.de-dietrich.com****, where you will find our latest innovations as well as useful and complementary information.*

DE DIETRICH
Setting New Values

As part of our commitment to constantly improving our products, we reserve the right to make changes to them based on technical advances to their technical and functional features and appearance.

Warning :
Before installing and using your appliance, please carefully read this Guide to Installation and Use, which will allow you to quickly familiarise yourself with its operation.

EN

CONTENTS

1 / FOR THE USER'S ATTENTION
- Safety instructions ____ 4
- Environmental protection ____ 5
- Economical, environmentally friendly washing ____ 5

2 / DESCRIPTION OF YOUR APPLIANCE
- General presentation of the dishwasher ____ 6
- Presentation of control panel ____ 7

3 / INFORMATION ____ 8

4 / WHAT TO DO BEFORE FIRST USING THE MACHINE
- Measure the water hardness ____ 9
- Hardness table and select the type of detergent ____ 9

5 / WATER SOFTENER ADJUSTMENTS ____ 10

6 / ADJUSTING THE SETTINGS
- "SET" setting ____ 11
- "4/1" setting ____ 11

7 / LOADING THE DETERGENT PRODUCTS ____ 12

8 / LOADING THE REGENERATING SALT ____ 13

9 / LOADING THE RINSING PRODUCT ____ 14

10 / YOUR DISHWASHER'S EQUIPMENT
- The upper basket ____ 15
- The lower basket ____ 16
- The cutlery basket ____ 16
- Cutlery drawers ____ 17

11 / WASHING PROGRAMMES ____ 18

12 / PROGRAMMING ____ 20

13 / CLEANING YOUR APPLIANCE
- Cleaning the waste filters ____ 22
- Extended period of non use or house relocation ____ 23

14 / YOUR DISHWASHER'S SAFETY SYSTEMS ____ 24

15 / IF OPERATING ABNORMALITIES OCCUR ____ 25

16 / INDICATIONS FOR THE TESTING LABORATORIES ____ 30

17 / AFTER-SALES SERVICE ____ 32

WARRANTY CONDITIONS ____ 33

Important :

Keep this user's manual with your appliance. If the appliance is sold or transferred to someone else, ensure that the manual is with it. Please take note of these instructions before installing and using your appliance. They have been drawn up for your own and other people's safety.

• SAFETY INSTRUCTIONS

• Installation

– When you receive your appliance, unpack it or have it unpacked immediately. Check that it has not suffered any damage during transport. Express any reservations in writing on the delivery note, of which you keep a copy. Never connect up a damaged machine. If your appliance is damaged, please contact your dealer.
– Before proceeding to connect up your machine, please refer to the instructions in your Installation Guide.
– Your dishwasher must be kept disconnected from the mains supply throughout the whole of the installation process.
– The electrical connection details on your appliance's description plate must comply with those for the mains supply.
– The socket must still be accessible once your appliance has been installed.
– Do not alter or attempt to alter the appliance's characteristics. This could put you at risk.
– If your installation has to be altered, only entrust the electrical and plumbing work to a qualified electrician or plumber respectively.
– Your appliance is designed for normal domestic use. Do not use it for industrial or commercial purposes or for any other purpose than that for which it has been designed.
– Your appliance is designed to be used for household and similar applications such as:
• staff kitchenettes in shops, offices and other professional environments,
• farmhouses,
• use by guests at hotels, motels and other residential-type facilities,
• bed and breakfast type facilities.
– The dishwasher's walls must not be pierced under any circumstances.

• Children's safety

– This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
– This appliance must only be used by adults. Ensure that children do not touch it and do not use it as a toy. Ensure that they do not operate the appliance's controls.
– Keep young children away from the appliance when it is operating.
– Detergents contain irritant and abrasive substances. These products can have caustic effects on the eyes, the mouth or the throat. They can be extremely dangerous if ingested. Avoid any contact with the skin and the eyes. Ensure that the appliance's detergent container is empty at the end of the washing cycle.
– Place detergents out of children's reach and do not put any detergent in the machine until just before you start the washing programme.
– The water in your dishwasher is not drinking water; this is why children must not go near the appliance when its door is open.
– Do not allow children to play with or sit on the door when it is open. Danger as the dishwasher could overturn.
– Once you have unpacked your appliance, place the packaging out of children's reach.
– Keep all the packaging materials (e.g. plastic bags, polystyrene, etc.) out of children's reach because they can be dangerous for children (ice. risk of suffocation).

EN 1 / FOR THE USER'S ATTENTION

• *Use*

– This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
– When machine is running, do not open door. This may provoke steam leakage or splattering of water.
– Only use products specially designed for your dishwasher (water softening salt, detergent and rinsing products).
– As far as possible, avoid opening the dishwasher's door when it is operating, and in particular during the heating phases, because scalding steam may escape or you may be splashed with hot water. The machine is fitted with a safety system that immediately blocks the dishwasher's operation if the door is opened.
– Never use chemical solvents in your appliance because these could cause an explosion.
– Always close your appliance's door after loading or removing your items.
– Do not lean or sit on your appliance's door when it is open. Danger as the dishwasher could overturn.
– Unplug your machine before carrying out any technical work on it.
– Avoid placing your machine immediately next to a cooking or heating appliance to prevent any risk of heat damage;
– Do not place any items in your machine, which are not certified as dishwasher safe.
– If you have removed an item before the end of the washing programme, it is important to rinse it carefully to remove any residual washing products.
– If your appliance breaks down, never attempt to repair it yourself. Any repairs made by non-qualified personnel can cause significant damage or lack of control.
– The machine complies with applicable safety regulations. Any repairs should be carried out by qualified technicians. Repairs or changes that do not conform may be dangerous for the users. In case of replacement, only use original parts.
– If the machine malfunctions due to other causes than those mentioned in this booklet, disconnect the machine (remove the plug) or break the circuit concerned and contact after-sales service.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- the door should not be left in the open position since this could present a tripping hazard.
- WARNING: Some dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with the skin and eyes and keep children away from the dishwasher when the door is open. Check that the detergent receptacle is empty after completion of the wash cycle.

• *ENVIRONMENTAL PROTECTION*

This appliance's packaging material is recyclable. Help recycle it and protect the environment by dropping it off in the municipal receptacles provided for this purpose.
Your appliance also contains a great amount of recyclable material. It is marked with this label to indicate that in countries the used appliances should not be mixed with other waste.

We thank you doing your part to protect the environment.

• *ECONOMICAL, ENVIRONMENTALLY FRIENDLY WASHING*

– Remove any food residue from your crockery (bones, pips, etc.)
– Do not pre-wash your items by hand (useless waste of water).
– Utilise your dishwasher's capabilities to the full for an economical, environmentally friendly wash.
– Always select a washing programme suitable for the crockery type and how dirty they are.
– Avoid overdosing with detergent, regenerating salt and rinsing liquid. Follow the recommendations in this guide (pages 8-14) and the instructions on the product packs.
– Ensure that the water softener is correctly set (see page 10).

• *GENERAL PRESENTATION OF THE DISHWASHER*

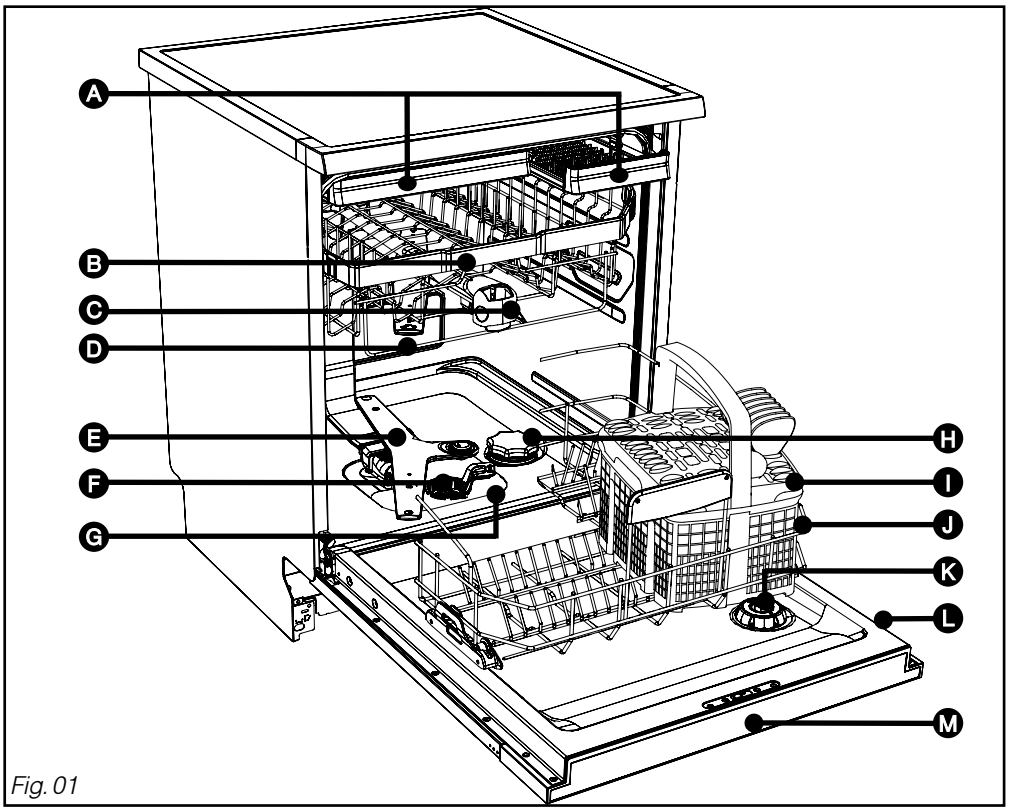

Fig. 01

- **A** ***Cutlery drawers***
- **B** ***Upper basket***
- **C** ***Wash product dispenser***
- **D** ***Anti-block guide wire***
- **E** ***Lower sprinkler arm***
- **F** ***Waste filter***
- **G** ***Main filter***
- **H** ***Salt compartment***
- **I** ***Cutlery basket***
- **J** ***Lower basket***
- **K** ***Rinse aid dispenser***
- **L** ***Reference plate (Ref. S.A.V.)***
- **M** ***Control panel***

Advice :

This user's guide is applicable to several models. There may be some slight differences in the details and the equipment between your appliance and the descriptions provided here.

• *PRESENTATION OF CONTROL PANEL (Some models only)*

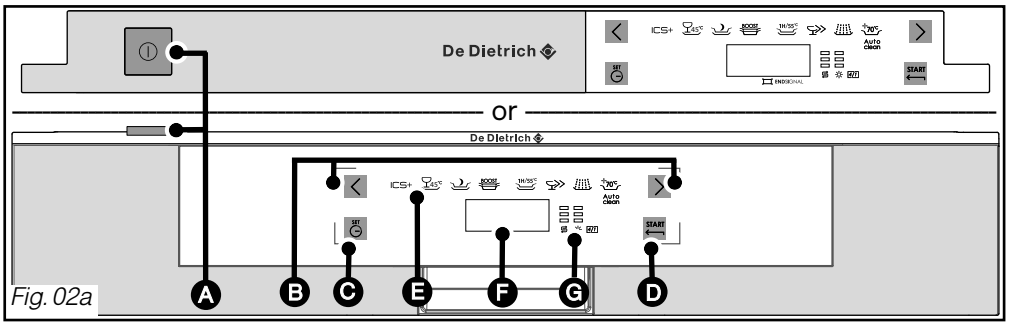

Fig. 02a

A *On/ Off :*
Press this button to start up the dishwasher.

B *Selection buttons :*
For choosing the programme (see page 20).

For change the settings (see page 10-11).

C *Set, Delayed end :*
Changing the settings (see page 10-11).
Adjusting the programme end time (see page 21).

D *START :*
Press this button to start up the programme.
In case of error, hold down this button for a few seconds to cancel a selection or a programme that is already running.

E *Programme selected indicator :*
High brightness : this indicates the programme has been selected.

F *Display :*
This shows the current time, the programme end time, the remaining programme time and the setting adjustments.

G *Pilot lights :*

Salt :
On: indicates the salt compartment is empty or almost empty.

Rinse aid :
On: indicates the rinse aid compartment is empty or almost empty.

4/1 Multi-function products :
On: this indicates the “4/1” function is activated (see page 11). The programmes are automatically adapted to multi-function products.

For **power saving purposes**, this dishwasher automatically goes onto **standby** if it has not been activated for a certain period (except in time delay mode).
The display becomes intermittent.
The tub’s light switches off automatically after 5 minutes of lightning (Some models only).
To exit standby mode, simply press the “**START**” button. The dishwasher will then go into its previous status.

Observations :
A short beep confirms the button has been pressed (except the “On/Off” button).
To aid the loading process, the dishwasher interior light comes on when you open the door and switches off when you push it up or close it, regardless of the position of the “On/Off” button (Some models only).

Important :

For your dishwasher to provide excellent washing and drying results and leave no marks, you must correctly adjust it using the water softening system, which works with dishwasher salt.

• ***Scale,*** when rainwater filters into the soil, it takes in mineral salts, some of which are found in solid form and are commonly referred to as scale. Scale in the water reduces the detergent's washing efficiency, causes deposits to form on the dishwasher itself and leaves white marks on the dishes.

The more scale there is in the water, the "harder" the water is.

You should use products suited to the water hardness in your particular area.

• There are so many different types of product. How can I choose the best one ?

For impeccably clean dishes, you should use a combination of classic products :

① ***Wash product*** for perfectly clean dishes (powder or liquid detergent or standard tablets).

② ***Dishwasher salt*** for correct functioning of your dishwasher's water softener.

③ ***Rinse aid*** to help the dishes dry and eliminate drop marks.

Important :

Never use normal washing-up liquid.

For ease of use and in certain water hardness conditions only (< 25°F), multi-purpose products can make the use of regenerating salt and rinsing liquid unnecessary.

• ***"Two-in-one" tablets*** contain detergents and rinsing liquid or an agent serving the function of the salt.

• ***"Three-in-one" tablets*** contain detergents and rinsing liquid as well as an agent serving the function of the salt.

• ***"Four-in-one" "Five-in-one" tablets...*** also contain additives to prevent "wear" to glasses (i.e. to stop them clouding), risk of corrosion and discolouring of stainless steel.

Important :

Follow the instructions in the user's manual and the recommendations on the multi-purpose detergent's pack.

NB :

If in any doubt, please contact the detergent's manufacturer if the items are very wet at the end of the programme or if chalky deposits appear.

• *MEASURE THE WATER HARDNESS*

In one simple action, you can test the your water's lime content using the testing strip supplied with your dishwasher. Alternatively, contact your local water utility to ascertain your water's hardness.

– Let the water run from the tap for a few moments.
– Fill a glass with water.
– Take the test strip from its holder and immerse it for 3 seconds.
– Wait 1 minute, shake it and look at the colours to ascertain your water's hardness.

• *HARDNESS TABLE AND SELECT THE TYPE OF DETERGENT*

Test strip	□□□□□	■□□□□	■■□□□	■■■□□	■■■■□	■■■■■	■■■■■
Hardness	0-10°F 0-1mmol/l 0 - 5,6 °dH	10-18°F 1-1,8mmol/l 5,6 - 10 °dH	18-25°F 1,8-2,5mmol/l 10 - 14 °dH	25-40°F 2,5-4mmol/l 14 - 22,4 °dH	40-55°F 4-5,5mmol/l 22,4 - 30,8 °dH	55-70°F 5,5-7,0mmol/l 30,8 - 39,2 °dH	> 70°F > 7,0mmol/l > 39,2 °dH
Water	Soft	Slightly hard	Slightly hard	Hard	Hard	Hard	Very hard
Water softening and use of salt	Optional	Essential if using traditional products	Essential if using traditional products	Mandatory	Mandatory	Mandatory	Mandatory

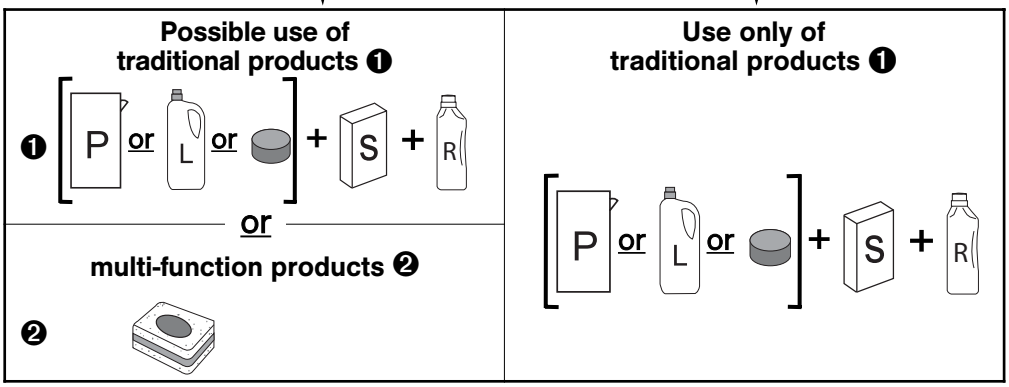

❶ **Traditional products:** **P** : **P**owder detergent or **L** : **L**iquid detergent or single tablet
+ **S** : Regenerating **S**alt + **R** : **R**insing product

❷ **Multi-function products:** Multi-function tablets

EN 5 / WATER SOFTENER ADJUSTMENTS

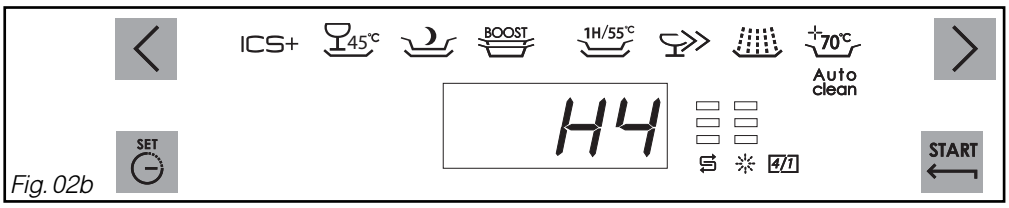

Fig. 02b

Important :

It is essential to correctly adjust the water softener according to the hardness of the water in your area.

-If the adjustment is too low, scale may be left on the dishes.

-If the adjustment is too high, there is a risk of glasses becoming cloudy.

If you move house, adjust the water softener again.

- ***Proceed as follows to adjust the water softener to the control table :***

– This adjustment is to be done at the **"SET" Setting** stages (see page 11).

– To change the adjustment between H0 and H6, according to the water hardness (see the table below), briefly press the up or down buttons **"** < **"** or **"** > **"** successively. The display will indicate the adjustment.

– Make sure you validate the adjustment by briefly pressing "**START**" twice (to exit the **"SET" Setting** menu, see page 11).

– **To use multi-function tablets you must select adjustment H0 or H1 or H2,** according to the water hardness. < 25°F. Make the 4/1 adjustment as indicated on page 11.

Hardness	0-10°F 0-1mmol/l 0 - 5,6 °dH	10-18°F 1-1,8mmol/l 5,6 - 10 °dH	18-25°F 1,8-2,5mmol/l 10 - 14 °dH	25-40°F 2,5-4mmol/l 14 - 22,4 °dH	40-55°F 4-5,5mmol/l 22,4 - 30,8 °dH	55-70°F 5,5-7,0mmol/l 30,8 - 39,2 °dH	> 70°F > 7,0mmol/l > 39,2 °dH
Adjustments	H0	H1	H2	H3	H4	H5	H6

Important :

Adjustment H0 disables the salt refill indicator light.

• *"SET" SETTING*

- ***Hold down the "SET" button once to access the adjustment menu.***
- ***Adjust the settings using the programme selection buttons "<" or ">".***
- ***Briefly press the "START" button once to go on to the next setting.***

The adjustments will be stored in the memory after validating the last setting.

If you cancel (by holding down the "START" button) or switch off the appliance during adjustment, the setting changes will not be registered.

> Adjusting the clock (hours)

When the hour is flashing, press either of the selection buttons until the desired hour is reached.
Press **"START"** to go on to adjustment of the next setting.

> Adjusting the clock (minutes)

Follow the same procedure: press either of the selection buttons until the desired minutes are reached.
Press **"START"** to go on to adjustment of the next setting.

> Adjusting the water softener

Adjust this to the corresponding degree for the water hardness measured, from H0 to H6 (see page 40).
Press **"START"** to go on to adjustment of the next setting.



> End of programme beep

Adjust to b iP1 to activate this function, or b iP0 if you do not require an end-of-programme beep.
Press **"START"** to save the settings

• *"4/1" SETTING*

> Multi-function products

Select this function if you are using multi-function products.

Reminder : For optimum product efficiency, it is important to correctly adjust the water softener (see page 10). If it is adjusted to **H3 or higher**, this function cannot be enabled.

To enable or disable this function, before selecting the programme hold down the selection button "<" until the pilot light switches on or off.

4/1 (pilot light on) function enabled;

4/1 (pilot light off) function disabled.

Enabling this function cancels the dishwasher salt and rinse aid level display.

EN 7 / LOADING THE DETERGENT PRODUCTS

• *Loading the detergent products. (Fig. 03-04-05)*

To make loading the detergent easier, the distributor is located on the front of the upper basket. It is compatible with all the products recommended for your dishwasher.

• *Powders or liquids (Fig 03)*

– Pull out the dispenser drawer
– Fill at least up to the minimum mark for slightly dirty crockery and to the maximum mark for dirty crockery. If the crockery is very dirty and for programmes with a pre-wash we recommend that you add 5 gr. of detergent (a dessert spoonful) into your dishwasher's tub in accordance with the programmes table.
– Close the distributor.

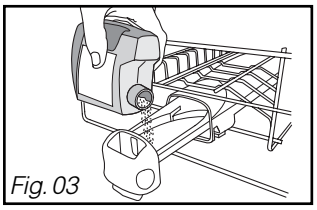
Fig. 03

• *"Multi-purpose" or Traditional tablets (Fig 04 and 05)*

– Place the tablet in the external compartment (Fig 04),
or, for optimum operation,
– pull out the distributor's drawer and lay the tablet there. (Fig 05).
– Close the distributor.

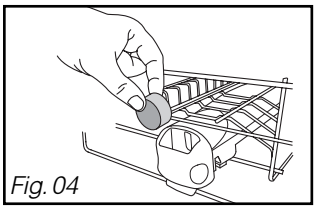
Fig. 04

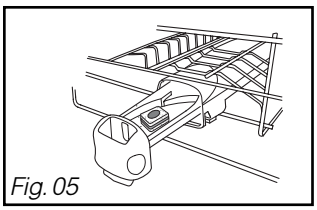
Fig. 05

Important :
Keep these products out of the reach of children and away from damp (the protective film on the tablets might be water-soluble).
Only use products specially designed for dishwashers.

• *Loading the regenerating salt. (Fig. 06)*

Important :

Use special salt for dishwashers. Never use table salt or cooking salt as this could damage the appliance.

Ⓐ Unscrew and remove the compartment cap.

Ⓑ Fill the compartment with special dishwasher salt. Use the funnel supplied with the dishwasher.

Firmly screw the cap back on.

Ⓒ The first time you fill the compartment with salt, **fill it up to the top with water**.

• *Determining the regenerating salt level :*

A scale on the display indicates the fill level.



full almost full empty (flashing)

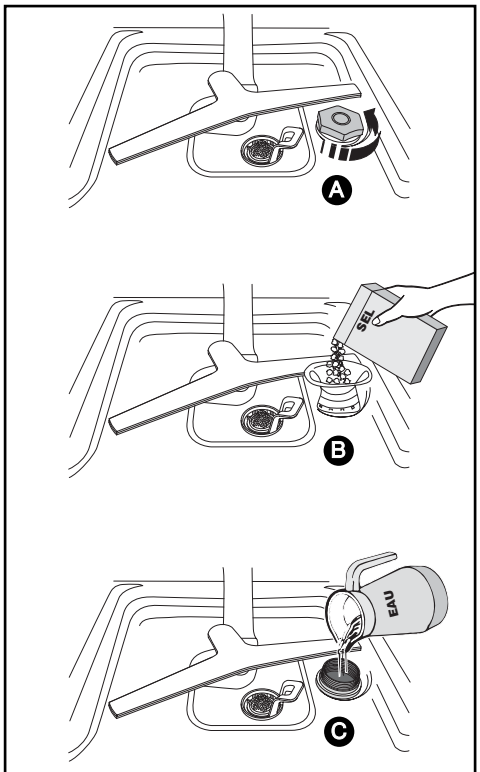

Fig. 06

Tip :

For especially soft water not requiring regenerative salt or when using "4-in-1" pellets, you can deactivate the salt level detector (see page 11).

Important :

If the salt overflows from the dispenser, remove the excess salt crystals to prevent risk of the tank rusting and run a Soak programme or, failing this, a short programme (see page 18-19) with no load in the dishwasher.

Firmly screw the compartment cap back on.

• *Loading the rinsing product. (Fig. 07)*

Important :

Use a special dishwasher rinse aid product to improve drying and prevent filming.

Ⓐ Unscrew and remove the compartment cap.

Ⓑ Before starting up the dishwasher, fill the compartment with rinse aid up to the adjustment lever.
Firmly screw the cap back on.

Ⓒ The default adjustment is 2.

If drying is inefficient or marks are leftest glasses (after having run several cycles), you may increase the dosage by setting the adjustment to 3 ;

Tip :

Setting the adjustment to 1 reduces rinse aid consumption and may be sufficient for your needs.

• *Determining the rinse aid product level :*

The screen shows you a fill level indicator.

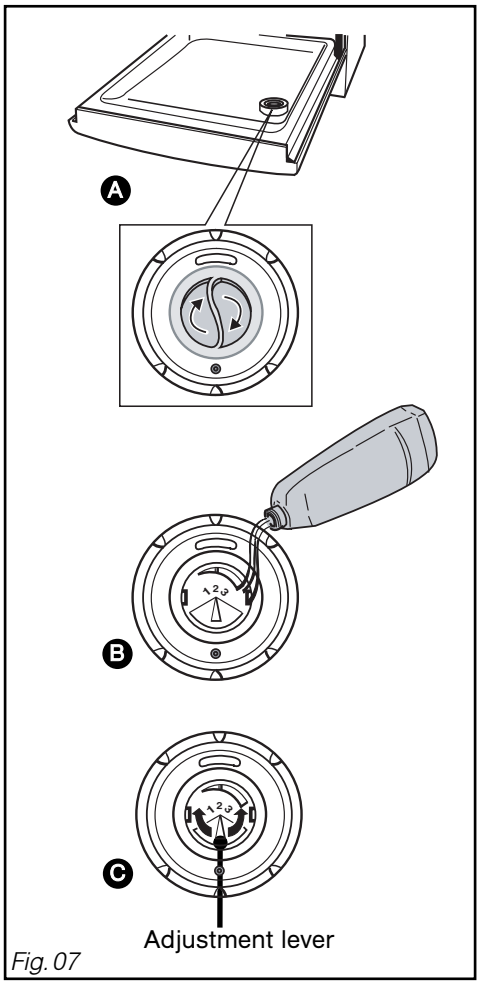

Fig. 07

Tip :

If using combined (4-in-1) pellets, this product is not required. You can deactivate the rinse product level detector (see page 11).

Important :

If the rinse aid overflows onto the door on refilling, sponge off the excess to prevent foam from forming.

Washing capacity : 14 standard place settings

Very important :
Items not suitable for washing in a dishwasher
- Wooden cutting boards,
- Stainless steel utensils or plastic utensils that are not heat-resistant,
- Copper or pewter items,
- Glued crockery and cutlery,
- Cutlery with wooden, horn or mother-of-pearl handles,
- Antique or hand-painted porcelain.
When purchasing crockery, glasses or cutlery, ensure that it is dishwasher-safe.

• *THE UPPER BASKET*

This basket is particularly designed to take glasses, cups, ramekins, small salad bowls, bowls and saucers.
Arrange your items methodically (arranging glasses, cups or bowls together) to save on space (Fig. 08).
You can also arrange cups, ladles, etc. on the folding cup racks.

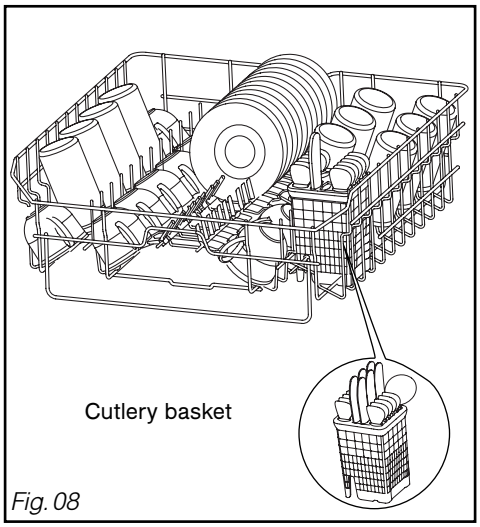

Fig. 08

Advice:
Position the cavities of glasses, cups or bowls facing downwards.

• Adjusting the height of the upper basket

For large dishes to be loaded in the lower basket, the upper basket must be set the to high position. This can be done with the basket fully loaded (Fig. 09)

① **Setting in HIGH POSITION :**
Gently raise your basket on each side until it engages.

② **Setting in LOW POSITION** :
Raise your basket completely on both sides to unlock it and then lower it to the low position.

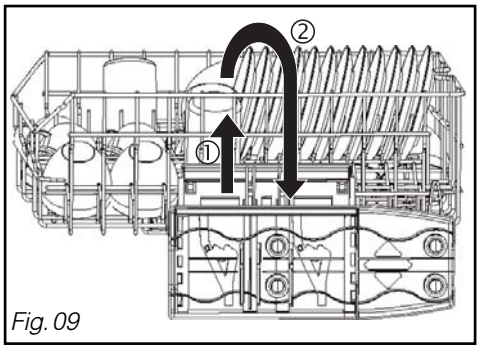

Fig. 09

Important :
Check that the two slides are set to the same height and the basket is horizontal.

• THE LOWER BASKET

Arrange your items so that the water can circulate freely and spray over all the utensils.
Place large diameter dishes and pans at the sides.
Do not intersperse, jam together or superimpose flat plates and concave dishes (Fig. 10).
The folding spikes make it easier to arrange your large dishes (Fig. 11) (depending on the model).

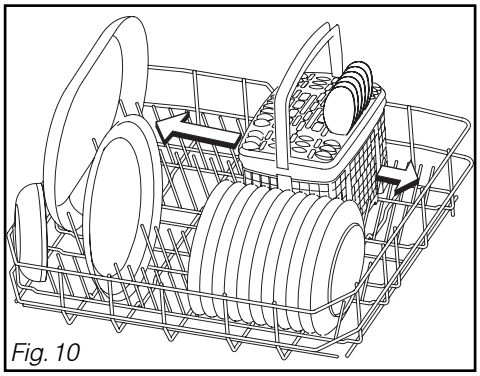
Fig. 10

Advice :
When you re-insert the lower basket, ensure that nothing catches on the upper basket's gauge wire to avoid blocking the rotor.

Unloading your items
First of all empty the lower basket to avoid drips from the upper basket falling onto the lower basket.

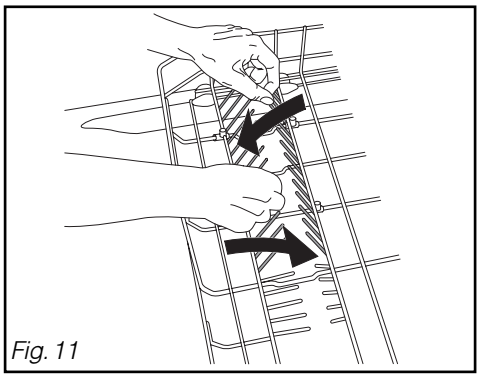
Fig. 11

• THE CUTLERY BASKET

The cutlery basket slides along runners for flexible loading.
You can place it in any part of the lower basket you wish, to change the loading arrangement according to the items in the load (Fig 10).

If the cutlery or dishes are too large and do not fit, adjust the height of the upper basket (if it is adjustable on your model of dishwasher)***.***

Movable grills are available for if you wish to load your cutlery in an orderly manner.
For optimum washing and drying, use these separation grills partially or totally (Fig. 12).
Point the handles on the cutlery downwards.

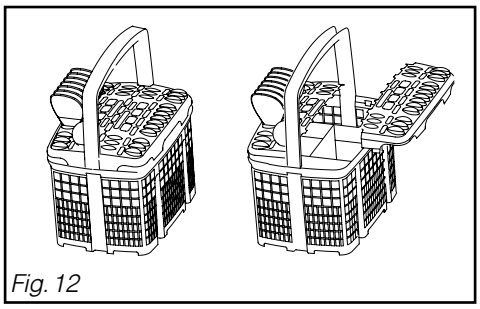
Fig. 12

Important :
For safety reasons, we recommend that you place knives with pointed ends with the point facing downwards in the cutlery basket (to avoid the risk of an accident).
Long-bladed knives and other sharp kitchen utensils must be placed flat in the upper basket.

Avoid washing cutlery with horn handles in your dishwasher.
Separate silverware from other metals using the separation grill.

• CUTLERY DRAWERS

Your dishwasher is equipped with 2 dividable cutlery drawers.

Pull out the drawers and arrange the cutlery separately between the dividers (fig 13).

You can arrange the cutlery in the dishwasher in different ways using the different divisions.

Important :

For safety reasons, place long-bladed knives and other steel cooking utensils in the cutlery drawer or place them flat in the upper rack.

Do not wash cutlery with horn handles in the dishwasher.

Tip :

Loading the cutlery in the drawers.

For optimum washing and drying, arrange the cutlery in the drawers as shown in fig. 13.1. Take care not to position it as shown in fig. 13.2 (items too close together, round handles not secured in place, items protruding over the edge of the drawer, etc.)

Bulky items of cutlery should be placed in the top basket.

• Removing a cutlery drawer :

You may need to remove one of the cutlery drawers for tall items to fit, e.g. stemmed wine glasses.

- Empty the drawer you wish to remove, pull it out and then push it back in again to around 3 cm.
- Holding the drawer with one hand, disengage the runner from its hooks, pushing out the lower rod (fig 13.3). Repeat this process for the other runner.
- Push the runners back in, folding them inwards horizontally until you hear a click.

• Replacing a cutlery drawer :

- Replace the rods vertically and pull on them. Fit and clip the hooks in place, first on one side, then on the other.

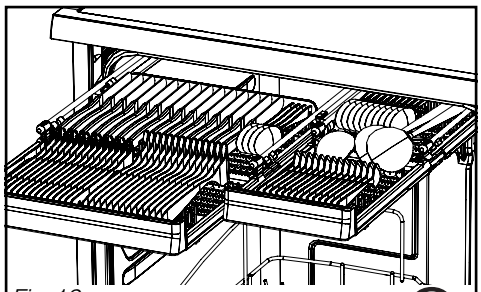

Fig. 13

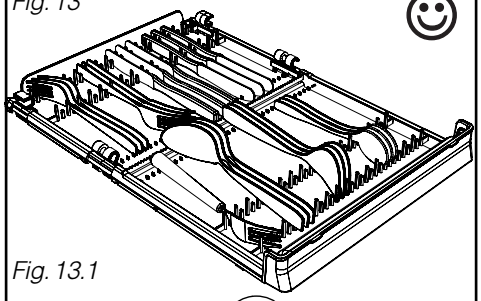

Fig. 13.1

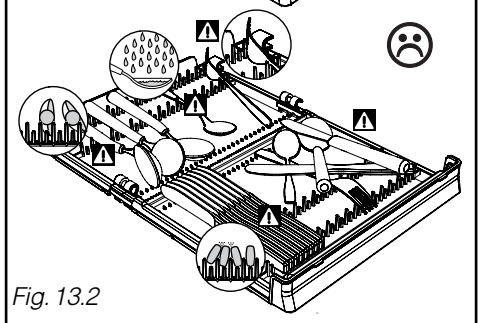

Fig. 13.2

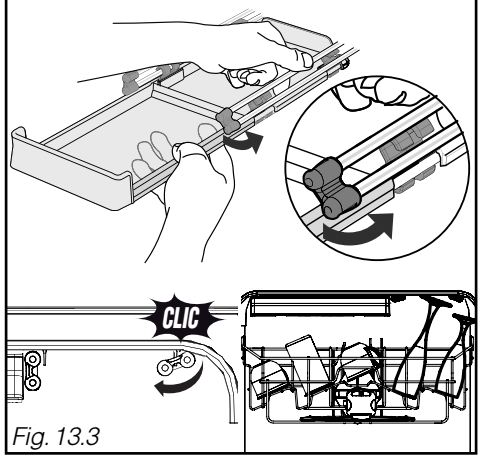

Fig. 13.3

• *PROGRAMME CHART*

Type of crockery : porcelain, pans, cutlery, glasses etc...	Mixed	Mixed	Mixed	Resistant
Amount, type and state of food residues.	**Intelligent Control System +** **Automatic detection of amount of dirt.** Optimises results, prioritising energy saving.	**Mormally dirty** an average amount of food residue and grease. This is the most **economical** programme as regards **water** and **energy** saving.	**Normally dirt** i.e. an average amount of food residue and grease. This is the **quietest** programme, it saves energy and is ideal for washing the dishes at night.	**Very dirty** Very dirty dinner plates and pans, baked-on stains, grease, frying residues, hardened cheese, sauce, etc.
Programmes	ICS+	**Normal Eco** 45°C		BOOST
Programme sequence.	prewash			hot prewash
	wash 50-65°C	wash 45°C	wash 45°C	wash 70°C
	rinse	rinse	rinse	rinse
	hot rinse	hot rinse	hot rinse	hot rinse
	drying	drying	drying	drying
for guidance				
Duration (min)	85 - *115*	**140** - *160*	315 - *320*	120 - *140*
Water (l)	14 - *16*	**10,1** - *13*	10 - *12*	14,5 - *16,5*
Energy (kWh)	1,25 - *1,40*	**0,59** - *1,3*	1,05 - *1,2*	1,7 - *1,8*

These values refer :
- to normal usage conditions with separated products (detergents, salt, rinsing product).
- *only to multifunction product usage conditions*

They may vary depending on the load, the water temperature, the softener setting, the presence of rinsing product and the supply voltage.

Mixed	Delicate	Mixed	Mixed	No load
Short wash, 60 minutes specially suited to day-to-day dishes, ordinary dirt, slightly dirty	**Very short wash, 30 minutes** specially suited to **delicate loads** of day-to-day dishes, slightly dirty, dirt not dried on, no excessive grease.	Very short cycle (no detergent) to rinse and keep the dishes wet before washing the following day or the day after	Special cycle for **sanitising** day-to-day dishes.	**Specific maintenance programme** The dishwasher must be completely emptied and any large residues removed from the filter. Auto clean [1]
				Removes grease and scale from the dishwasher tank, keeping it working efficiently and prolonging its lifetime. For optimum results, use **a specially designed dishwasher cleaning fluid** (if not, powder or a tablet in the product drawer).
		cold prewash	hot prewash	
wash 55 °C	wash 45°C		wash 70°C	
rinse	rinse		rinse	
hot rinse	hot rinse		hot rinse	
drying			drying	
60 14 - *16* 1,3 -*1,4*	30 11 0,95	15 4,5 0,02	90 - *110* 14,5 - *16,5* 1,6 - *1,7*	90 10,5 0,9

[1] This programme can be accessed by pressing the "›" button if the 70°C programme is on high brightness display.

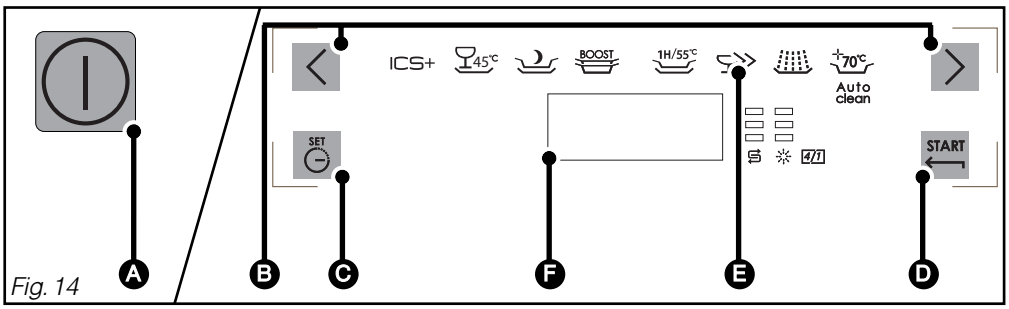

Fig. 14

Important :

If your dishwasher has a front control panel, in order to prevent the buttons from being pressed accidentally on opening or moving the door the programming can only be done with the door closed.

Consult the Programmes table on the preceding pages to determine the programme you need for the type of items, the quantity and the amount of food residue.

• *Starting up the appliance*

Press button **A**, the display **F** will light up.

• *Immediate programme start*

Choose the desired programme by pressing either of the **B** buttons.

Programme light **E** will come on.

The screen **F** displays the programme end time.

Validate your choice by pressing button **D**.

The programme will start up.

The time will count down as the programme advances. The display **F** shows the time remaining until the end of the programme.

• *AutoClean :*

A maintenance programme specifically for your dishwasher, run without any crockery.

Advice :

Use this program periodically, every 3 months, to remove any deposits. Use a special dishwasher cleaning product.

• *Delayed programme start*

You may choose to delay the start of the wash programme with this dishwasher :

Choose the desired programme by pressing either of the Ⓑ buttons.

Press button Ⓒ once.

Programme the end time, in steps of 10 minutes, using either of the Ⓑ buttons.

Validate your choice by pressing button Ⓓ.

The programme end time will appear on the display Ⓕ until the programme starts. Only the pilot light Ⓔ for the selected programme will remain on.

• *End of programme*

When the programme finishes, the word **"End"** will appear on the display.



• *Cancelling a programme*

To cancel a programme or if you have made the wrong selection, hold down button Ⓓ for a few seconds until you hear the cancel beep.

You can then programme the dishwasher again.

• *Switching off the appliance*

When the programme has ended, press button Ⓐ.The display Ⓕ will switch off.

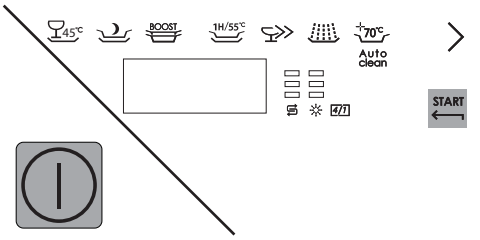

Observations :

A short beep confirms the button has been pressed (except the "On/Off" button).

Remarks :

The door's electrical safety system can cause the indicator lights to illuminate briefly when the door is opened or closed. This phenomenon does not affect your machine's operation.

If required, and particularly after the water softener has been reset, the programme may start with three minutes of resin regeneration. This is a silent operation.

• *CLEANING THE WASTE FILTERS*

The filtration system consists of several elements :

Ⓐ - The waste filter.
Ⓑ - The large main filter.
Ⓒ - The micro filter.

The filters are located in the centre of the tub and must be washed regularly to obtain optimum washing results.

• **Procedure :**

① Before removing the filters, remove the waste from the large main filter Ⓑ using a sponge, to prevent this waste from blocking the sprinkler arms. Position the sprinkler system as shown in the diagram (Fig. 15)

② Turn the waste filter a quarter of a turn and remove it Ⓐ .

③ Remove the main filter Ⓑ.

④ Remove the microfilter mesh Ⓒ.

⑤ Carefully clean filters Ⓐ, Ⓑ and Ⓒ under the tap. (Fig. 16)

Re-installation :

Proceed in reverse order, inserting filters Ⓒ and Ⓑ and then Ⓐ

Important :

Remember to lock the waste filter Ⓐ in place by pushing it in fully and turning it a quarter turn.

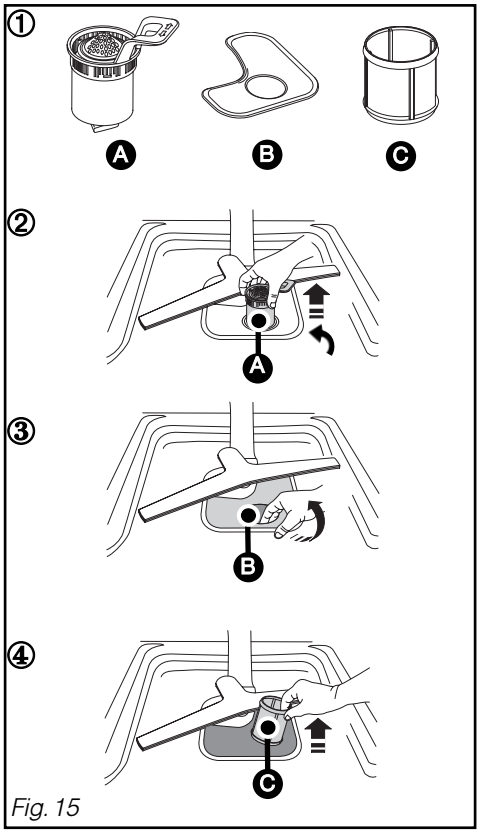

Fig. 15

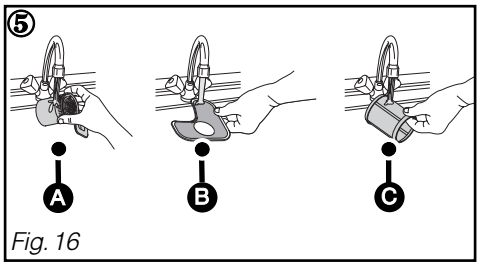

Fig. 16

• *Periodically*

Every 3 or 4 months you should run a special **"Auto clean"** maintenance programme with no load in the dishwasher (see page 19) to remove any dirt, with a special dishwasher cleaning product available in the shops.

Important :

Keep this product out of the reach of children.

• *AutoClean :*

A maintenance programme specifically for you dishwasher when empty.
Select the **"Auto clean"** programm (see page 20).
The screen shows you the time the programme will end.
Confirm by pressing **"START"**. The programme starts.

• *EXTENDED PERIOD OF NON USE OR HOUSE RELOCATION*

Unplug it from the mains and cut off the water supply, then thoroughly clean the dishwasher.
Protect the dishwasher from frost.

Tip :

Do not use abrasive powder, metal cleaning pads or alcohol or solvent based products. Use a cloth or sponge.

• *Door not properly closed*

The display flashes if the door is open or not properly closed.

• *Programme access block*

While a dishwasher programme is running, the buttons are automatically blocked to prevent them from being pressed accidentally. The dishwasher will automatically unblock at the end of the programme or you can cancel by holding down the **"START"** button for 3 seconds.

• *Anti-overflow safety system*

This system automatically activates the drain pump if the water level in the tank is exceptionally high.

• *Anti-leak safety system*

This system cuts off the water supply if any leakage is detected under the appliance.

• *Total safety*

The inlet pipe is equipped with a mechanism that directly cuts off the water supply to the tap in case of leakage.

• *Error display*

The error code appears on the display. See the table on page 25.

Observation :

After rectifying the error, hold down the "START" button for three seconds to unblock access.

• *SUMMARY OF THE FAULTS*

D01	**d01:** water intake fault (tap).	**d07:** overflow/leak protection fault	**D07**
D02	**d02:** draining fault.	**d08:** sprinkler distribution fault.	**D08**
D03	**d03:** heating fault.	**d11:** sprinkler distribution fault.	**D11**
D04	**d04:** temperature sensor fault.	**d12:** water level fault (siphoning through drain tube)	**D12**
D05	**d05:** low pump flow fault.	**d13:** overheating fault.	**D13**
D06	**d06:** high pump flow fault.	**d14:** bad drain tube connection or tap flow insufficient or filters dirty.	**D14**

Tip :
If one of the above faults occurs and you need to call a repair man, remember to tell him the message displayed (d01, d02..) as this information will help him.

• *BEFORE CALLING FOR SERVICE*

Problem	*Possible causes*	*What to do?*
The door falls heavily when opened (integratable model)	- Door springs not tensioned enough to compensate for the weight of the panel.	- Tighten the two tensioning screws accessible in the bottom section above the front feet.
The door does not stay horizontal when open or returns too quickly (integratable model)	- Door springs tensioned too much. - No wooden panel.	- Loosen the two tensioning screws accessible in the bottom section above the front feet. - Fit a temporary wooden panel on the appliance and adjust the springs.
The door catches when closing	- Appliance not stable - Door not centred on the tub	- Adjust the feet. - Re-centre by adjusting the rear feet.
The upper basket does not stay in the high position	- Poor manipulation (the basket is being pulled upwards too quickly)	- Act more progressively (see instructions), one side and then the other.
Small leak around or under the appliance (move the appliance to locate the leak)	- Leak from the tap. - Leak from the appliance. (Cf. table fault d07).	- Check that a seal is fitted and relighted the nut. - Close the water tap and call a technician.
Small leak at the door	- Appliance not stable or not level - Door not centred on the tub.	- Adjust the feet. - Re-centre by adjusting the rear feet.

• THE INDICATOR LIGHTS

Problem	*Possible causes*	*What to do ?*
The salt light does not go out	- No salt or an insufficient quantity of salt in the tank to trigger the float.	- Refill the tank and wait for the cycle to end. If you have soft water that requires no salt, the light is constantly lit.
The lights all light up one after the other	- Wrong programme.	- Cancel the current programming by holding down the Start button for 3 seconds and then re-programme.
A light flashes and the programme does not start	- On some models,programme selector wrongly positioned (between two notches)	- Reposition the selector on a programme.

• RELATING TO PROGRAMMING, DISPLAY

Problem	*Possible causes*	*What to do ?*
The cycle lasts too long	- the energy-saving programmes last longer because the agitation and drying times are longer to compensate for the lower washing and drying temperatures	- Use these programmes preferably at night when it is not so important how long the programme lasts or when it ends.
The appliance trips the circuit breaker	- Insufficient amperage to supply all the appliances being operated simultaneously. - Internal fault in the appliance.	- Check the socket's amperage (10A minimum) and the meter's capacity. - Call a technician.
The appliance does not start	- No mains power to the socket. - Tap closed. (Cf. table fault d01). - Selection error or programme lock. - Start button pressed too long (>2"). - Appliance in Safety mode (anti-leak).(Cf. table fault d07).	- Check the socket and the fuse - Check the tap is open. - Check the hose line is OK. - Cancel by holding down Start for 3" and re-programme. - Just press Start briefly to start the programme. - Call a technician.

Problem	*Possible causes*	*What to do?*
The appliance will not restart	- Door opened during a washing cycle.	- Wait for the time delay to end (controlled internally by the appliance).
The appliance does not drain (Cf. table fault d02).	- The cover has not been removed from the sink's U-bend. - Drain hose kinked. - Filters totally blocked. - Pump blocked.	- Remove the cover. - Check the drain hose line behind the machine is OK. - Remove and clean the filters and the drain. - Initiate a Soaking programme If the fault persists, call a technician.
The appliance will no longer function (see table, fault 14).	- installation of non-compliant drainage system: drainage too low down or pipe pushed too far in. - siphoning: the appliance is emptying as the same time as it is filling up. - filter system clogged.	- adhere to the drainage tube installation dimensions. - Cleaning the filters.

• *POOR WASHING RESULTS*

Problem	*Possible causes*	*What to do?*
Food traces and deposits in the glasses	- Items poorly arranged (masked by another larger item or situated underneath it, items nested or jammed together). - Upper spray arm blocked by cutlery or a dish etc. - Filter poorly locked and lifting during washing. - Micro filter screen clogged. - One or more holes in the spray arm blocked.	- Arrange the items properly. Use the most appropriate areas and accessories for each type of item (see instructions). - Check that the spray arm rotates freely. Set the basket in the high position if necessary. - Check the filter's facing and that the filter is locked in place (push it in fully, turning it to the right). - Remove all the filters and clean them (in warm water), including the micro filter's screen (once a month). - Remove the spray arm by turning the lever a quarter of a turn and clean it under the tap (do not use any tool that could damage the holes). Re-install the spray arm.
Traces of grease	- Detergent dose too low; inefficient detergent; stale product. - Inappropriate programme (temperature too low; duration too short).	- Increase the dose; try another detergent. - Select a programme with a higher temperature.

• *POOR WASHING RESULTS...*

Problem	*Possible causes*	*What to do?*
White marks (identify what type)	- Chalky film (removable with vinegar). - Traces of salt (items have a salty taste).	- Check that there is salt in the tank (light unlit = OK). - Check the water hardness at the tap and that the water softener is set correctly. Adjust it to a higher level if necessary. - Water too hard for using a "4-in-1" detergent without the addition of salt. - Check that the stopper on the salt container is closed correctly.
White marks (identify what type)	- Glass cloudy because water too soft (cannot be removed).	- Check the water hardness at the tap and that the water softener is set correctly. Some detergents in pellet form are more aggressive to glasses and decorations (change the product and use a protective product if necessary).
Coloured marks (tea, wine, coffee)	- Items poorly arranged - Detergent dose too low; inefficient detergent - Programme temperature too low. - If you use a multifunction product.	- Turn the cavities in the items towards the jets. - Increase the dose; try another detergent. - Select a more suitable programme with a higher temperature. - Use the "4-in-1" option (depending on the model).
Streaks or dried droplets on glasses	- Lack or insufficient amount of rinsing product. - Rinsing product out-of-date or inefficient. - If you use a multifunction product.	- Check the indicator light and fill the tank completely. Adjust the dispensing unit to a higher position if necessary. - Use a recent product (a good product dilutes easily and foams in cold water). - Use the "4-in-1" option (depending on the model).
Dried-on marks on glasses, dullness.	- If you use a multifunction product.	- Use the "4-in-1" option (depending on the model).

• POOR OPERATION

Problem	*Possible causes*	*What to do ?*
Constant filling	- Drain wand fallen on the floor. - Drain hole situated too low for the appliance (Cf. table fault d12).	- Check the installation of drain
A lot of waste on the large filter at the end of the cycle.	- The filters and drain outlets are blocked with too much residue.	- Remove and clean the filters and the bottom of the drain outlets. Remove large residue from the plates before putting them in the machine.
Traces of rust on stainless steel	- Quality of the stainless steel not dishwasher-safe (knives in particular)	- Use “special dishwasher-safe” cutlery. - Check that the stopper on the salt container is closed correctly.

• POOR DRYING RESULTS

Problem	*Possible causes*	*What to do?*
A lot of droplets on the glasses.	- Lack or insufficient amount of rinsing product. - The dose has not been distributed. - Positioning of the items.	- Check the indicator light and fill the tank completely. - If the tank is not empty after approximately 60 washings, call a technician. - To alleviate the phenomenon, arrange the items to restrict water retention as much as possible. Leave the door ajar for a few minutes, if possible
Droplets on plastic items, Tefal coatings, etc.	- These insulating items have a low calorific mass.	- Arrange them preferably in the upper basket.
Poorer drying on rapid programmes	- On rapid programmes, the drying temperature and drying period are reduced to cut down the duration of the cycle as much as possible.	- Select a rapid programme carefully or leave the door ajar for a few minutes.
Condensation on the wall of the inside door or the tub.	- Condensation may form on the walls, particularly after the appliance has cooled down (sound insulation increases the phenomenon)	

EN 16 / INDICATIONS FOR THE TESTING LABORATORIES

ENERGY EFFICIENCY TESTS ACCORDING TO AS/NZS 2007 PROGRAMME : Normal Eco

– Washing capacity ---------- 14 standard place settings
– Arrangement of the items ---------- Figs. A-B-C ; see next page
– Loading as per the indications on the next page :
- with 2 shelves (for 3 cups),
- with 5 cup / saucer supports (4 for 12 saucers + 1 dessert plate and 1 for 2 cups)
- with supports stemmed glass
- without cutlery drawers (see page 17).

– Setting for upper basket ---------- Low position
– Dosage of detergent ---------- 5 + 27,5 g of detergent
– Setting for rinsing product distributor ---------- 3
– The water softener must be set to 0-1mmol/l
instructions in the paragraph on **"**5 / WATER SOFTENER ADJUSTMENTS**"**.
– Door ajar 100 mm upon completion of dry test.

For more information on the comparison tests in accordance with AS/NZS 2007, please contact the manufacturer of the machine before commencing testing.

NB: When conducting tests using a multi-function tablet :
– Check that the water softener is correctly set for the water hardness
(paragraph **"**5 / WATER SOFTENER ADJUSTMENTS**"**)
- Pull out the detergent distribution drawer and place the tablet in the interior compartment.

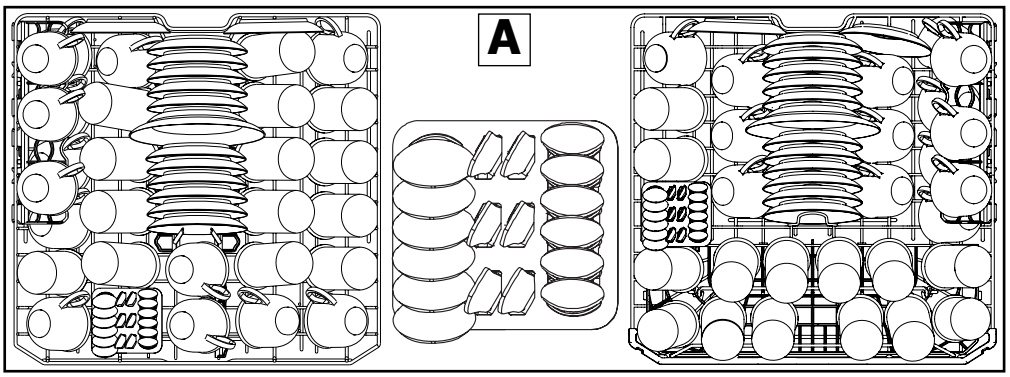
A

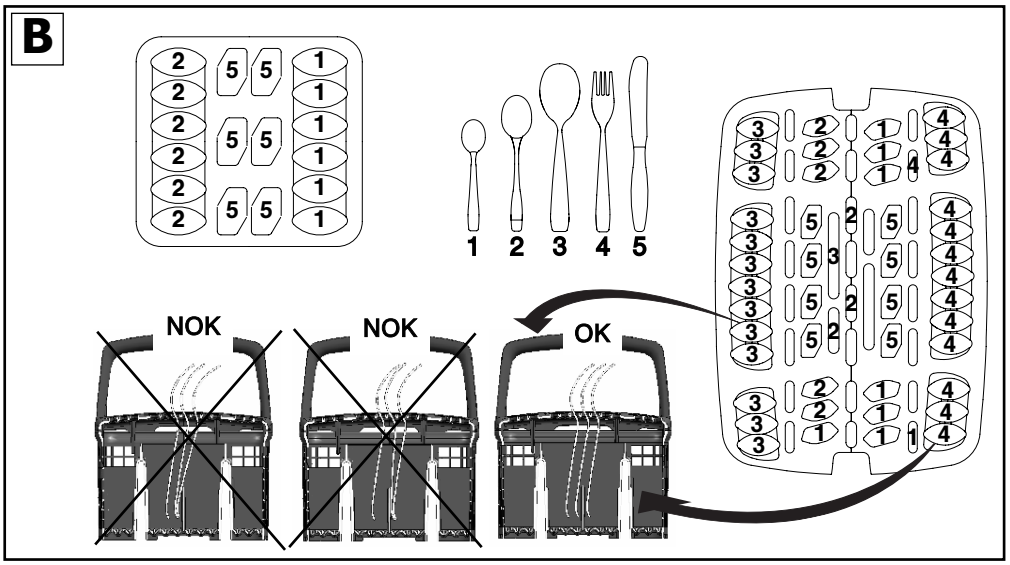
B
1 2 3 4 5
NOK
NOK
OK

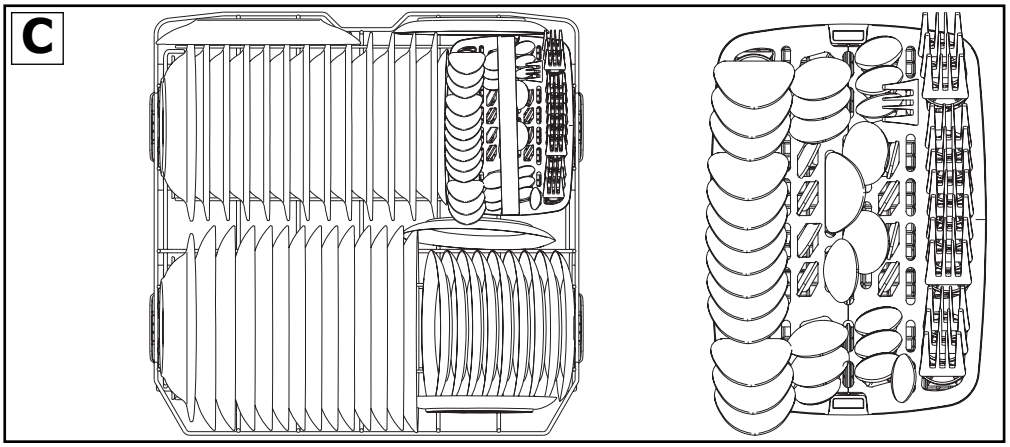
C

• *INTERVENTION WORK*

Any intervention work on your appliance must be performed by a qualified professional approved by the manufacturer. When you call, please mention the full reference for your appliance (model, type and serial number).

This information is shown on the description plate (see Fig. 17)

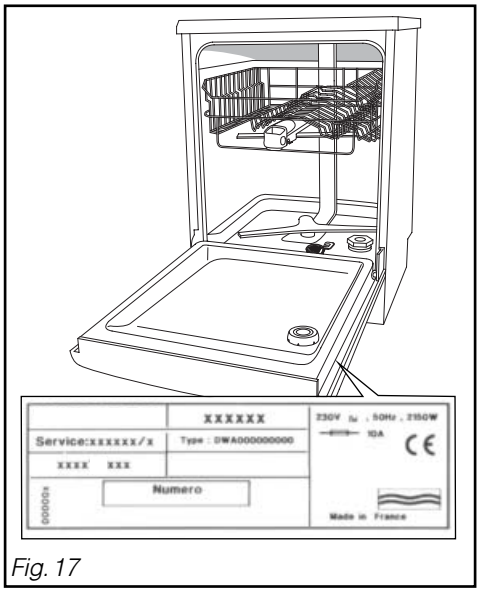

Fig. 17

ORIGINAL PARTS

When maintenance is being carried out, ask for only certified original spare parts to be used.

Eurolinx Pty Limited A.B.N. 50 001 473 347
Office:
48-50 Moore Street, Leichhardt N.S.W 2040
Post:
Locked Bag 3000, Annandale, N.S.W 2038
P: 1300 856 411

WARRANTY REGISTRATION

Your ongoing satisfaction with your De Dietrich product is important to us. We ask that you complete the enclosed Warranty Registration Card and return it to us so that we have a record of the De Dietrich product purchased by you.

PRIVACY

Eurolinx Pty Ltd respects your privacy and is committed to handling your personal information in accordance with the National Privacy Principles and the Privacy Act 1988 (Cth). A copy of the Eurolinx Privacy Policy is available at www.eurolinx.com.au. Eurolinx will not disclose any personal information set out in the Warranty Registration Card ("Personal Information") without your consent unless required by:

1. law;

2. any Eurolinx related company;

3. any service provider which provide services to De Dietrich or assist Eurolinx in providing services (including repair and warranty services) to customers. Our purpose in collecting the Personal Information is to keep a record of the De Dietrich product purchased by you, in order to provide a better warranty service to you in the unlikely event that there is a problem with your De Dietrich product. Eurolinx may contact you at any one or more of the address, email address or telephone numbers set out in the Warranty Registration Card. Please contact Eurolinx on 1300 694 583 should you not wish to be contacted by Eurolinx.

WARRANTY

1. Warranty

Eurolinx warrants that each De Dietrich product will remain, for a period of twenty four (24) months computed from the date of purchase of the De Dietrich product, free from defects arising in the manufacture of the De Dietrich product ("Warranty"). Except for consumer guarantees set

out in the Competition and Consumer Act 2010 (Cth) ("Act"), De Dietrich does not make any further warranties or representations in relation to De Dietrich products.

2. What is not Covered by the Warranty.

The Warranty does not apply if a De Dietrich product is defective by a factor other than a defect arising in the manufacture of the De Dietrich product, including but not limited to:

(a) damage through misuse (including failure to maintain, service or use with proper care), neglect, accident or ordinary wear and tear (including deterioration of parts and accessories and glass breakage);

(b) use for purpose for which the De Dietrich product was not sold or designed;

(c) use or installation which is not in accordance with any specified instructions for use or installation;

(d) use or operation after a defect has occurred or been discovered;

(e) damage through freight, transportation or handling in transit (other than when De Dietrich is responsible);

(f) damage through exposure to chemicals, dusts, residues, excessive voltage, heat, atmospheric conditions or other forces or environmental factors outside the control or De Dietrich;

(g) repair, modification or tampering by the purchaser or any person other than De Dietrich, an employee of Eurolinx or an authorised

De Dietrich service contractor*;

(h) use of parts, components or accessories which have not been supplied or specifically approved by De Dietrich.

(i) damage to surface coatings caused by cleaning or maintenance using products not recommended in the De Dietrich product handbook provided to the purchaser upon purchase of the De Dietrich product;

(j) damage to the base of an electric oven due to items having been placed on the base of the oven cavity or covering the base, such as aluminium foil (this impedes the transfer of heat from the element to the oven cavity and can result in irreparable damage); or

(k) damages, dents or other cosmetic imperfections not affecting the performance of the De Dietrich in respect of an De Dietrich product purchased as a "factory second" or from display

The Warranty does not extend to light globes used in De Dietrich products.

3. Domestic Use

Each De Dietrich product is made for domestic use. This Warranty may not extend to De Dietrich products used for commercial purposes.

4. Time for Claim under the Warranty

You must make any claim under this Warranty within twenty eight (28) days after the occurrence of an event which gives rise to a claim pursuant to the Warranty, by booking a service call on the telephone number below.

Continued over...

5. Proof of Purchase

Customers must retain proof of purchase in order to be eligible to make a warranty claim in respect of an De Dietrich product.

6. Claiming under the Warranty

Customers will bear the cost of claiming under this Warranty unless Eurolinx determines the expenses are reasonable, in which case the customer must claim those expenses by providing written evidence of each expense to Eurolinx at the address on the Warranty Registration Card.

7. Statutory Rights

(a) These terms and conditions do not affect your statutory rights.

(b) The limitations on the Warranty set out in this document do not exclude or limit the application of the consumer guarantees set out in the Act or any other equivalent or corresponding legislation in the relevant jurisdiction where to do so would:

(i) contravene the law of the relevant jurisdiction; or

(ii) cause any part of the Warranty to be void.

(c) Eurolinx excludes indirect or consequential loss of any kind (including, without limitation, loss of use of the De Dietrich product) and (other than expressly provided for in these terms and conditions) subject to all terms, conditions and warranties implied by custom, the general law, the Act or other statute.

(d) The liability of Eurolinx to you for a breach of any express or non-excludable implied term, condition or warranty is limited at the option of De Dietrich to:

(i) replacing or repairing the defective part of the De Dietrich product;

(ii) paying the cost of replacing or repairing the defective part of the De Dietrich product;

(iii) replacing the De Dietrich product; or

(iv) paying the cost of replacing the De Dietrich product.

(e) Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

8. Defects

Any part of an De Dietrich product deemed to be defective and replaced by De Dietrich is the property of De Dietrich. De Dietrich reserves the right to inspect and test De Dietrich products in order to determine the extent of any defect and the validity of a claim under the Warranty.

*To locate your closest De Dietrich authorised service agent please contact Eurolinx on

1300 856 411 or visit

http://support.eurolinx.com.au/

ALL SERVICE CALLS MUST BE BOOKED THROUGH THE De Dietrich SERVICE AND WARRANTY DEPARTMENT ON 1300 856 411

01082013

Distributed By:

eurolinx
AUSTRALIA | NEW ZEALAND

De Dietrich
OBJETS DE VALEUR DEPUIS 1684

Distributed By:

eurolinx
AUSTRALIA | NEW ZEALAND

WARRANTY REGISTRATION CARD
01082013

Please complete and send to DE DIETRICH at: REPLY PAID 83617
LEICHHARDT NSW 2040

Last Name:		First Name:
Address:		
State:	Postcode:	Email:
Home Phone:		Mobile:
Purchase Date: / /		(Please attach proof of purchase to validate warranty)

MODEL NUMBER	SERIAL NUMBER (if you cannot locate the serial number please call Eurolinx on 1300 85 64 11)
1	
2	
3	
4	

01082013

DW3M00445_00 - 1/1 - 06/13

FagorBrandt SAS, locataire-gérant - SAS au capital social de 20 000 000 euros RCS Nanterre 440 303 196.

Photographie de couverture/front cover photography: Michel Gibert

DVF125XA / DVH1150XA / DVH118GJA